



Front-Loading Washer-Dryer

Addendum to Users Guide

Models: WD2000S
WD2100
WDC6200CEE

QUESTIONS?

Westland Sales

15650 SE 102nd Ave (PO BOX 427)
Clackamas, OR 97015

Call: 1-800-356-0766

Local: 503-655-2563
Service Fax: (503) 722-9202
E: service@splendide.com

www.splendide.com

No Dryer Lint Filter

No more messy lint filter cleanings! Lint passes safely through a 'self-cleaning pump' and then out the drain or dryer vent in your Splendide.

If small items (like keys or hair clips) accidentally fall into the pump, they're safely withheld in a coin trap that you can easily access (*see Users Guide*).

WD2000S, WD2100 Models: Occasionally, go outside and check the dryer vent for proper airflow. Assure that the vent and ducting are lint-free.

Winterization (for RV or marine installs)

A) To winterize your washer-dryer

- 1) With machine power OFF, pour ½ quart of RV-type antifreeze into washer drum
- 2) Close door. Advance **Program Dial** to a 'Spin' position
- 3) Press **ON-OFF** Button (IN). Wait 1-2 minutes
- 4) Press **ON-OFF** Button (OUT). Unplug washer-dryer from electrical outlet (or disconnect power)
- 5) Turn water supply faucets OFF. Disconnect inlet hoses from faucets. Drain remaining water from the hoses. **FINISHED.**

Optional RV Winterization - If currently pumping antifreeze through a fresh water system

- 1) With machine power OFF, turn **WASH TEMP** knob to HOT
- 2) Advance **Program Dial** to REGULAR in Cotton Heavy Duty
- 3) Press **ON-OFF** button (IN). Let machine fill until antifreeze is in the drum
- 4) Advance **Program Dial** to 'RESET'. Wait 5 seconds (Status/Door Lock LED will blink)
- 5) Advance **Program Dial** to a 'Spin' position. Let the antifreeze drain from the drum
- 6) Advance **Program Dial** to 'RESET'. Wait 5 seconds (Status/Door Lock LED will blink)
- 7) Press the **ON-OFF** button (OUT)
- 8) Turn **WASH TEMP** knob to COLD
- 9) Repeat steps 2 through 7. **FINISHED.**

B) To use again, flush water pipes, then

- 1) Reconnect water inlet hoses to corresponding HOT/COLD faucets. Turn faucets ON. NOTE: Check water inlet hoses and pump periodically (*see Users Guide*).
- 2) Plug washer-dryer in to appropriate electrical outlet (*see Users Guide*) - or reconnect power supply

- 3) With **ON-OFF** button in the OFF (OUT) position, pour ½ TBSP. of powder detergent (or liquid equiv.) into the 'Detergent' compartment inside the Dispenser Drawer (*see Users Guide*).
- 4) Advance **Program Dial** to an EXPRESS position
- 5) Press **ON-OFF** button (IN). Allow machine to run through complete cycle to clean out any remaining antifreeze. **FINISHED.**

Opening the Door

To open the door during a WASH cycle

- 1) Advance **Program Dial** to 'RESET'. Wait 5 seconds.
- 2) Advance **Program Dial** to 'Drain' (8 o'clock) and allow the machine to drain completely.
- 3) Advance **Program Dial** to 'RESET' ('Status/Door Lock' LED will blink quickly to indicate that the cycle has stopped, but the door is STILL LOCKED)
- 4) When the 'Status/Door Lock' LED blinks SLOWLY (takes 1-2 minutes), you can open the door

To open the door during a DRY cycle

- 1) Advance **Program Dial** to 'RESET' (The 'Status/Door Lock' LED will blink FAST to indicate the cycle has stopped).
- 2) Wait for the 'Status/Door Lock' LED to blink SLOWLY (takes 1-2 minutes). Open the door.



IMPORTANT: DO NOT attempt to open the door until the 'Status/Door Lock' LED is blinking SLOWLY!




DO NOT DISCARD!


This information supersedes the information found in your owners manual.
Keep this page with your owners manual for future reference



User Quick Guide

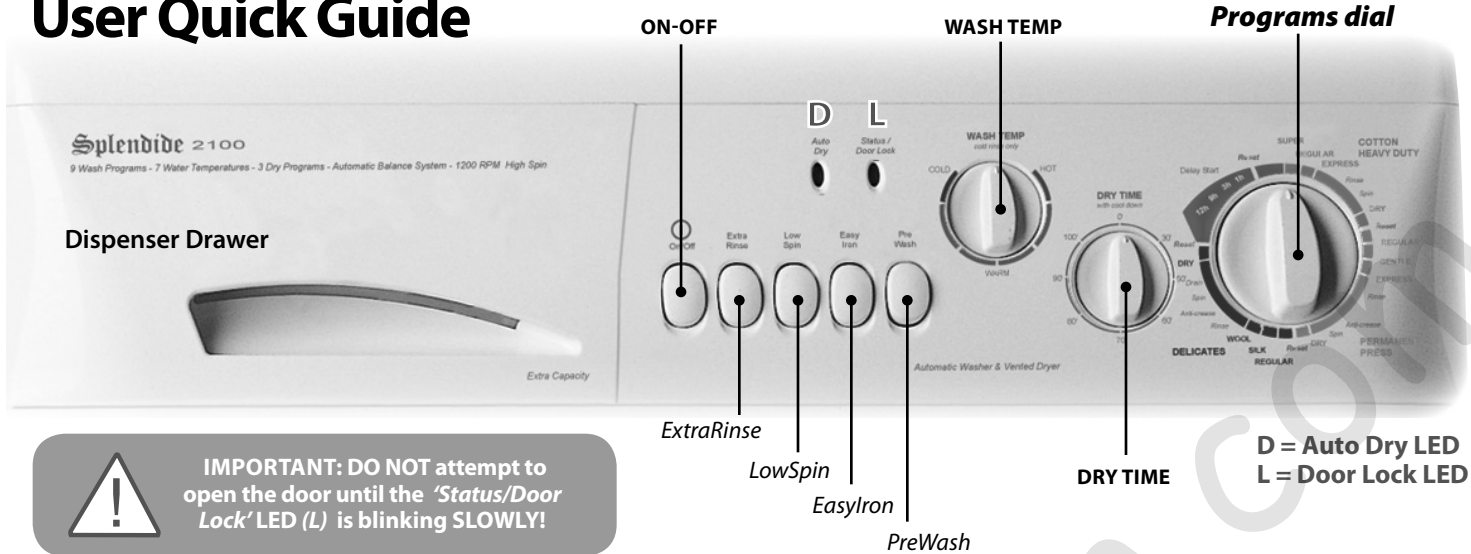

IMPORTANT: DO NOT attempt to open the door until the 'Status/Door Lock' LED (L) is blinking SLOWLY!

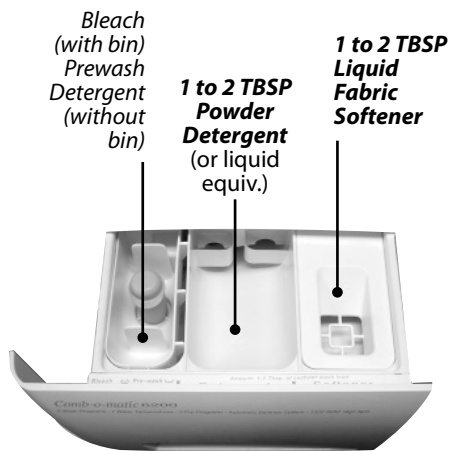

LAUNDRY LOAD SIZES

Washing capacity - 12 lbs. max.

Fabric	Max load.
Cottons	12 lbs.
Synthetics	6 lbs.
Delicate Fabrics	5 lbs.
Wools	3 lbs.

Drying capacity - 6 to 8 lbs. max.

Always allow space for air to flow around the clothes when drying. If going from wash to dry automatically, load the drum according to drying capacity.

BEFORE SETTING THE CONTROLS Always make sure,

- the door is closed
- the ON-OFF button is in the OFF (OUT) position
- the **Programs Dial** is in a "RESET" position
- laundry aids have been added to the **Dispenser Drawer** (see above)

SET A WASH TO DRY CYCLE

- 1) WASHING**
 - Select a washing cycle by rotating the **Programs Dial** clockwise
 - Set the wash water temperature with the **WASH TEMP** knob.
 - To further customize the wash program, press one of the four **WASH OPTIONS** buttons
- 2) DRY TIME**
 - Select drying minutes with the **DRY TIME** knob.
- 3) Press the ON-OFF button (IN).** After washing, Splendide will start drying.

SET A WASHING CYCLE

- 1) WASHING**
 - **See WASHING (above)**
- 2) DRY TIME**
 - Set the **DRY TIME** knob to **0'**
- 3) Press the ON-OFF button (IN).** After washing is complete, Splendide will stop.



SET A DRYING CYCLE

- 1) DRYING**
 - Select a dry cycle by rotating the **PROGRAMS** dial clockwise
- 2) DRY TIME**
 - Select drying minutes with the **DRY TIME** knob (**30' to 120'**)
- 3) Press the ON-OFF button (IN).** After drying, Splendide will stop.



LAUNDRY TIPS

Don't let laundry pile up

Place a load in Splendide every 1-2 days and return to clean, dry laundry. **Note:**

- Wash cycles are **40-80 min.** and use 7.5 to 18 gal. of water. **You may not see water in the drum.** This is normal.
- Avg. dry times are **90-110 min.**
- Once set, the **DRY TIME** knob won't move

Door lock

Once a cycle begins, the door will lock and **STAY LOCKED** until it ends. When the **'Status/Door Lock LED'** blinks SLOWLY (one to two-minutes later) you can open the door. To open the door during a cycle, **see 'Opening the Door' (opposite page).**



FOR BEST RESULTS,

- **DON'T OVERLOAD** the drum.
- **DON'T EXCEED** laundry aid amounts.
- **ALWAYS USE A FABRIC SOFTENER.**
- **ONLY** use '**Cotton Heavy Duty**' for heavy cottons (towels, jeans, etc.)
- For items that may wrinkle, use '**LOW SPIN**' in wash and '**Delicates Dry**'
- After washing, shake out **LARGE ITEMS** (pants, sheets, etc.) Loosely fold them and place them back in the drum. Then dry them.
- For mixed loads, set a shorter dry time and remove items that may wrinkle while still damp (dress shirts, etc.) Hand press and hang them. Continue drying the rest (underwear, towels, etc.)
- **DON'T OVERDRY LAUNDRY.** A certain amount of moisture is what makes fabrics soft and fluffy.